

AIR HEATER QUICK START

TIMER OVERRIDE TO CONTINUOUS RUN



- STEP 1 Press """ button (item 1) to start the heater. Item 5 will flash during start up.
- **STEP 2** Press and hold "%" button (item 2) for 2 seconds. (*This puts the heater into a continuous run mode*). Item 6 will change to a clock.
- STEP 3 Use the "<" button (item 3) to decrease heat or the ">" button (item 4) to increase heat. To turn the heater off press the "™" button (item 1).

For more detailed operating instructions, please refer to the Owner's Manual Part #925820. Available at www.proheat.com

